# Instruction Manual



## Infinity Supported Application 1992–2000 Honda B/D/H Series





#### THIS PRODUCT HAS LEGAL RESTRICTIONS. READ THIS BEFORE INSTALLING/USING!

THIS PRODUCT MAY BE USED <u>SOLELY</u> ON VEHICLES USED IN SANCTIONED COMPETITION WHICH MAY NEVER BE USED UPON A PUBLIC ROAD OR HIGHWAY, UNLESS PERMITTED BY SPECIFIC REGULATORY EXEMPTION. (VISIT THE "EMISSIONS" PAGE AT <u>HTTP://</u>WWW.SEMASAN.COM/EMISSIONS FOR STATE BY STATE DETAILS.)

IT IS THE RESPONSIBILITY OF THE INSTALLER AND/OR USER OF THIS PRODUCT TO ENSURE THAT IT IS USED IN COMPLIANCE WITH ALL APPLICABLE LAWS AND REGULATIONS. IF THIS PRODUCT WAS PURCHASED IN ERROR, <u>DO NOT</u> INSTALL AND/OR USE IT. THE PURCHASER <u>MUST</u> ARRANGE TO RETURN THE PRODUCT FOR A FULL REFUND.

THIS POLICY ONLY APPLIES TO INSTALLERS AND/OR USERS WHO ARE LOCATED IN THE UNITED STATES; HOWEVER CUSTOMERS WHO RESIDE IN OTHER COUNTRIES SHOULD ACT IN ACCORDANCE WITH THEIR LOCAL LAWS AND REGULATIONS.

WARNING: This installation is not for the tuning novice! Use this system with EXTREME caution! The AEM Infinity Programmable EMS allows for total flexibility in engine tuning. Misuse or improper tuning of this product can destroy your engine! If you are not well versed in engine dynamics and the tuning of engine management systems DO NOT attempt the installation. Refer the installation to an AEM-trained tuning shop or call 800-423-0046 for technical assistance.

NOTE: All supplied AEM calibrations, Wizards and other tuning information are offered as potential starting points only. IT IS THE RESPONSIBILITY OF THE ENGINE TUNER TO ULTIMATELY CONFIRM IF THE CALIBRATION IS SAFE FOR ITS INTENDED USE. AEM holds no responsibility for any engine damage that results from the misuse or mistuning of this product!

AEM Performance Electronics AEM Performance Electronics, 2205 126th Street Unit A, Hawthorne, CA 90250 Phone: (310) 484-2322 Fax: (310) 484-0152 http://www.aemelectronics.com Instruction Part Number: Document Build 1/6/2015

#### **OVERVIEW**

The AEM Infinity EMS can be adapted to most fuel injected engines. The base configuration files available for the Infinity ECU are starting points only and will need to be modified for your specific application. This manual lists the files available and suggested changes for your engine. It also includes a pinout with suggestions for adapting the Infinity ECU to your engine harness. It is the responsibility of the installer to verify this information before starting the engine.

#### MODELS

#### Honda

1992-2000 B/D/H Series Engines

### DOWNLOADABLE FILES

Files can be downloaded from <u>www.aeminfinity.com</u>. An experienced tuner must be available to configure and manipulate the data before driving can commence. The Quick Start Guide and Full Manual describe the steps for logging in and registering at <u>www.aeminfinity.com</u>. These documents are available for download in the Support section of the AEM Electronics website: <u>http://www.aemelectronics.com/</u>products/support/instructions.

#### **FILES**

#### Downloadable files for Honda B/D/H Series

- 7100-XXX-62 Infinity-10 (XXXX = serial number)
- 7101-XXX-63 Infinity-8 (XXXX = serial number)

In order to properly control a 1992–2000 Honda B/D/H engine, the <u>application specific settings</u> listed in this document MUST be changed to the given settings. Failure to do so may result in improper function and possible ECU damage.

## ADAPTER HARNESS OPTIONS

#### 30-3702 Harness, Mini Lead

This harness includes a fused power distribution center with main relay. Pre-terminated connectors are available for the internal UEGO sensors and AEMNet. A bag of multi-color flying leads is included to simplify custom harness builds.

#### 30-3701 Connector Kit

This kit includes mating connectors and terminals for the Infinity. It also includes a main relay kit which is necessary for proper power distribution. This kit is best suited for experienced installers who want to build their own harness.

#### 30-3600 O2 Sensor Extension Harness

30-3601 IP67 Comms Cable

30-3602 IP67 Logging Cable

#### IMPORTANT APPLICATION SPECIFIC SETTINGS

#### Infinity Tuner Wizard Setup

#### Engine

In the Wizard Engine tab confirm the following settings:

Number of Cylinders	= 4
Engine Cycle Type	= 4 Stroke
Ignition Type	= Distributor
Firing Order	= 1-3-4-2

#### Cam/Crank

In the Wizard Cam/Crank tab confirm the following setting:

Honda Distributor (1992–2000)

Add a text grid control to your layout and select the following channels. Make sure their values match the settings below for initial timing sync. These values will be populated when the Cam/Crank pattern is selected.

TrigOffset [degBTDC] = 35.00 CamSyncAdjustment = 8.00

#### **Injector Setup**

In the Wizard Injector Setup tab confirm the following setting:

```
Number of Injectors = 4
```

#### **Input Functions**

In the Wizard Input Function Assignment tab confirm the following setting:

AC Request Switch Setup = Digital6

#### **Ignition Sync**

See QuickStart Guide section **Setup: Ignition Sync** for instructions on timing sync.

## **PINOUTS**

## **Infinity Pinouts**

Dedicated	Dedicated and not reconfigurable			
Assigned	Assigned but reconfigurable			
Available	Available for user setup			
Not Applicable	Not used in this configuration			
Required	Required for proper function			

Infinity Pin	Hardware Reference	7100-XXXX-62 7101-XXXX-63 Function	Dest. Pin Honda OBD 1	Dest. Pin Honda OBD 2a	Dest. Pin Honda OBD 2b	Hardware Specification	Notes
C1-1	LowsideSwitch_4	A/C Relay Control	A15	A17	A26	Lowside switch, 4A max, NO internal flyback diode.	See "LowSide Assignment Tables" for output assignment.
C1-2	LowsideSwitch_5	LS5				Lowside switch, 4A max with internal flyback diode. Inductive load should NOT have full time power.	See Setup Wizard Page "LowSide Assignment Tables" for output assignment and 2D table "LS5_Duty [%]" for activation.
C1-3	LowsideSwitch_6	LS6	A9	*A12	B23	Lowside switch, 4A max with internal flyback diode. Inductive load should NOT have full time power.	See Setup Wizard Page "LowSide Assignment Tables" for output assignment and 2D table "LS6_Duty [%]" for activation.
C1-4	UEGO 1 Heat	UEGO 1 Heat					Lowside switch for UEGO heater control. Connect to pin 4 of Bosch UEGO sensor. NOTE that pin 3 of the Sensor is heater (+) and must be power by a fused/ switched 12V supply.
C1-5	UEGO 1 IA	UEGO 1 IA				Bosch UEGO	Trim Current signal. Connect to pin 2 of Bosch UEGO sensor.
C1-6	UEGO 1 IP	UEGO 1 IP				controller	Pumping Current signal. Connect to pin 6 of Bosch UEGO sensor.
C1-7	UEGO 1 UN	UEGO 1 UN					Nernst Voltage signal. Connect to pin 1 of Bosch UEGO sensor.
C1-8	UEGO 1 VM	UEGO 1 VM					Virtual Ground signal. Connect to pin 5 of Bosch UEGO sensor.

Infinity Pin	Hardware Reference	7100-XXXX-62 7101-XXXX-63 Function	Dest. Pin Honda OBD 1	Dest. Pin Honda OBD 2a	Dest. Pin Honda OBD 2b	Hardware Specification	Notes
C1-9	Flash_Enable	Flash Enable				10K pulldown	Not usually needed for automatic firmware updates through Infinity Tuner. If connection errors occur during update, connect 12 volts to this pin before proceeding with upgrade. Disconnect the 12 volts signal after the update.
C1-10	+12V_R8C_CPU	Battery Perm Power	D1	C10	B21	Dedicated power management CPU	Full time battery power. MUST be powered before the ignition switch input is triggered. (See C1-65.)
C1-11	Coil 4	Coil 4				25 mA max source current	0–5V Falling edge fire. DO NOT connect directly to coil primary. Must use an ignitor OR CDI that accepts a FALLING edge fire signal.
C1-12	Coil 3	Coil 3				25 mA max source current	0–5V Falling edge fire. DO NOT connect directly to coil primary. Must use an ignitor OR CDI that accepts a FALLING edge fire signal.
C1-13	Coil 2	Coil 2				25 mA max source current	0–5V Falling edge fire. DO NOT connect directly to coil primary. Must use an ignitor OR CDI that accepts a FALLING edge fire signal.
C1-14	Coil 1	Coil 1	A21	A20	B13	25 mA max source current	0–5V Falling edge fire. DO NOT connect directly to coil primary. Must use an ignitor OR CDI that accepts a FALLING edge fire signal.
C1-15	Coil 6	Coil 6				25 mA max source current	0–5V Falling edge fire. DO NOT connect directly to coil primary. Must use an ignitor OR CDI that accepts a FALLING edge fire signal.
C1-16	Coil 5	Coil 5				25 mA max source current	0–5V Falling edge fire. DO NOT connect directly to coil primary. Must use an ignitor OR CDI that accepts a FALLING edge fire signal.
C1-17	LowsideSwitch_2	Coolant Fan 1 Control	A12	A27	A20	Lowside switch, 4A max, NO internal fly back diode.	See "LowSide Assignment Tables" for output assignment.

Infinity	Hardware Reference	7100-XXXX-62 7101-XXXX-63	Dest. Pin	Dest. Pin Honda	Dest. Pin Honda	Hardware	Notes
FIII		Function	OBD 1	OBD 2a	OBD 2b	opechication	
C1-18	LowsideSwitch_3	MIL Output	A13	A18	A18	Lowside switch, 4A max with internal flyback diode. Inductive load should NOT have full time power.	See Wizard page "LowSide Assignment Tables" for output assignment. MIL Activates when any of the following flags are true: ErrorAirTemp, ErrorBaro, ErrorCoolantTemp, ErrorEBP, ErrorFuelPressure, UEGO_0_Diag_error, UEGO_1_Diag_error, ErrorMAFAnalog, ErrorMAFAnalog, ErrorMAFDigital, ErrorMAP, ErrorThrottle.
C1-19	AGND_1	Sensor Ground	D21	D12	C7	Dedicated analog ground	Analog 0–5V sensor ground
C1-20	AGND_1	Sensor Ground	D22	D11	C18	Dedicated analog ground	Analog 0–5V sensor ground
C1-21	Crankshaft Position Sensor Hall	Crankshaft Position Sensor Hall				10K pullup to 12V. Will work with ground or floating switches.	See Setup Wizard page Cam/ Crank for options.
C1-22	Camshaft Position Sensor 1 Hall	Camshaft Position Sensor 1 Hall				10K pullup to 12V. Will work with ground or floating switches.	See Setup Wizard page Cam/ Crank for options.
C1-23	Digital_In_2	Camshaft Position Sensor 2 Hall				10K pullup to 12V. Will work with ground or floating switches.	See Setup Wizard page Cam/ Crank for options.
C1-24	Digital_In_3	Turbo Speed Hz				10K pullup to 12V. Will work with ground or floating switches.	See Setup Wizard page Turbo Speed for calibration constant. TurboSpeed [RPM] = Turbo [Hz] * Turbo Speed Calibration.
C1-25	Digital_In_4	Vehicle Speed Sensor	*B10	*C18	*C23	10K pullup to 12V. Will work with ground or floating switches.	See Setup Wizard page Input Function Assignment for calibration constant.
C1-26	Digital_In_5	Flex Fuel				10K pullup to 12V. Will work with ground or floating switches.	See channel FlexDigitalIn [Hz] for raw frequency input data.
C1-27	Knock Sensor 1	Knock Sensor 1	D3	D6	C3	Dedicated knock signal processor	See Setup Wizard page Knock Setup for options.
C1-28	Knock Sensor 2	Knock Sensor 2				Dedicated knock signal processor	See Setup Wizard page Knock Setup for options.

© 2015 AEM Performance Electronics

Infinity Pin	Hardware Reference	7100-XXXX-62 7101-XXXX-63 Function	Dest. Pin Honda OBD 1	Dest. Pin Honda OBD 2a	Dest. Pin Honda OBD 2b	Hardware Specification	Notes
C1-29	+12V_Relay_Control	+12V Relay Control				0.7A max ground sink for external relay control	Will activate at key on and at key off according to the configuration settings.
C1-30	Power Ground	Ground	A23	A10	B21	Power Ground	Connect directly to battery ground
C1-31	CANL_Aout	AEMNet CANL				Dedicated High Speed CAN Transceiver	Recommend twisted pair (one twist per 2") with terminating resistor. Contact AEM for additional information.
C1-32	CANH_Aout	AEMNet CANH				Dedicated High Speed CAN Transceiver	Recommend twisted pair (one twist per 2") with terminating resistor. Contact AEM for additional information.
C1-33	LowsideSwitch_1	Boost Control				Lowside switch, 4A max with internal flyback diode. Inductive load should NOT have full time power.	See Setup Wizard page Boost Control for options. Monitor BoostControl [%] channel for output state.
C1-34	LowsideSwitch_0	Fuel Pump	A7	A16	A16	Lowside switch, 4A max, NO internal flyback diode.	Switched ground. Will prime for 2 seconds at key on and activate if RPM > 0.
C1-35	Analog_In_7	Throttle Position Sensor	D11	D1	C27	12 bit A/D, 100K pullup to 5V	0–5V analog signal. Use +5V Out pins as power supply and Sensor Ground pins as the low reference. Do not connect signals referenced to +12V as this can permanently damage the ECU. See the Setup Wizard Set Throttle Range page for automatic min/max calibration. Monitor the Throttle [%] channel. Also DB1_TPSA [%] for DBW applications.
C1-36	Analog_In_8	MAP Sensor	D17	D3	C17	12 bit A/D, 100K pullup to 5V	0–5V analog signal. Use +5V Out pins as power supply and Sensor Ground pins as the low reference. Do not connect signals referenced to +12V as this can permanently damage the ECU. See the Setup Wizard Set Manifold Pressure page for setup and calibration. Monitor the MAP [kPa] channel.

Infinity Pin	Hardware Reference	7100-XXXX-62 7101-XXXX-63 Function	Dest. Pin Honda OBD 1	Dest. Pin Honda OBD 2a	Dest. Pin Honda OBD 2b	Hardware Specification	Notes
C1-37	Analog_In_9	Fuel Pressure				12 bit A/D, 100K pullup to 5V	0–5V analog signal. Use +5V Out pins as power supply and Sensor Ground pins as the low reference. Do not connect signals referenced to +12V as this can permanently damage the ECU. See the Setup Wizard Fuel Pressure page for setup and calibration. Monitor the FuelPressure [psig] channel.
C1-38	Analog_In_10	Baro Sensor				12 bit A/D, 100K pullup to 5V	0–5V analog signal. Use +5V Out pins as power supply and Sensor Ground pins as the low reference. Do not connect signals referenced to +12V as this can permanently damage the ECU. See the Setup Wizard Barometric Pressure page for setup and calibration. Monitor the BaroPress [kPa] channel.
C1-39	Analog_In_11	Shift Switch Input				12 bit A/D, 100K pullup to 5V	0–5V analog signal. Use +5V Out pins as power supply and Sensor Ground pins as the low reference. Do not connect signals referenced to +12V as this can permanently damage the ECU. See the 1D lookup table 'ShiftSwitch' for setup. Also assignable to multiple functions. See Setup Wizard for details.
C1-40	Analog_In_12	Mode Switch				12 bit A/D, 100K pullup to 5V	0–5V analog signal. Use +5V Out pins as power supply and Sensor Ground pins as the low reference. Do not connect signals referenced to +12V as this can permanently damage the ECU. See the 1D lookup table 'ModeSwitch' for input state. A multi-position rotary switch such as AEM P/N 30-2056 is recommended. Also assignable to multiple functions. See Setup Wizard for details.
C1-41	+5V_Out_1	+5V Out	D19	D10	C19	Regulated, fused +5V supply for sensor power	Analog sensor power
C1-42	+5V_Out_1	+5V Out	D20	D4	C28	Regulated, fused +5V supply for sensor power	Analog sensor power

Infinity Pin	Hardware Reference	7100-XXXX-62 7101-XXXX-63 Function	Dest. Pin Honda OBD 1	Dest. Pin Honda OBD 2a	Dest. Pin Honda OBD 2b	Hardware Specification	Notes
C1-43	HighsideSwitch_1	HS1 (switched 12V)				0.7A max, High Side Solid State Relay	See Setup Wizard page 'HighSide Assigment Tables' for configuration options. See 2D lookup table 'HS1_Table' for activation settings.
C1-44	HighsideSwitch_0	VTEC	A4	A8	B12	0.7A max, High Side Solid State Relay	See Setup Wizard page 'HighSide Assigment Tables' for configuration options. See 2D lookup table 'HS0_Table' for activ ation settings. See Setup Wizard page 'VTEC' for default activ ation criteria.
C1-45	Crankshaft Position Sensor VR+	Crankshaft Position Sensor VR +	B16	C12	C9	Differential Variable	See Setup Wizard page Cam/ Crank for options.
C1-46	Crankshaft Position Sensor VR-	Crankshaft Position Sensor VR-	B15	C2	C8	Reluctance Zero Cross Detection	See Setup Wizard page Cam/ Crank for options.
C1-47	Camshaft Position Sensor 1 VR-	Camshaft Position Sensor 1 VR-	B11	C4	C29	Differential Variable	See Setup Wizard page Cam/ Crank for options.
C1-48	Camshaft Position Sensor 1 VR+	Camshaft Position Sensor 1 VR+	B12	C14	C30	Reluctance Zero Cross Detection	See Setup Wizard page Cam/ Crank for options.
C1-49	VR+_In_2	Non Driven Left Wheel Speed Sensor +				Differential Variable	See Non Driven Wheel Speed Calibration in the Setup Wizard Input Function Assignment page.
C1-50	VRIn_2	Non Driven Left Wheel Speed Sensor -				Cross Detection	
C1-51	VRln_3	Driven Left Wheel Speed Sensor -				Differential Variable Reluctance Zero	See Driven Wheel Speed Calibration in the Setup Wizard Input Function Assignment page.
C1-52	VR+_In_3	Driven Left Wheel Speed Sensor +				Cross Detection	
C1-53	DBW1 Motor -	DBW Motor Control Close				5.0A max Throttle Control Hbridge Driv e	+12V to close
C1-54	DBW1 Motor +	DBW Motor Control Open				5.0A max Throttle Control Hbridge Driv e	+12V to open
C1-55	Power Ground	Ground	A24	A23	B10	Power Ground	Connect directly to battery ground.
C1-56	Injector 6	Injector 6				Saturated or peak and hold, 3A max continuous	Injector 6
C1-57	Injector 5	Injector 5				Saturated or peak and hold, 3A max continuous	Injector 5

© 2015 AEM Performance Electronics

Infinity Pin	Hardware Reference	7100-XXXX-62 7101-XXXX-63 Function	Dest. Pin Honda OBD 1	Dest. Pin Honda OBD 2a	Dest. Pin Honda OBD 2b	Hardware Specification	Notes
C1-58	Injector 4	Injector 4	A2	A1	В5	Saturated or peak and hold, 3A max continuous	Injector 4
C1-59	Injector 3	Injector 3	A5	A2	B4	Saturated or peak and hold, 3A max continuous	Injector 3
C1-60	Power Ground	Ground	A26	A9	B20	Power Ground	Connect directly to battery ground.
C1-61	+12V	+12V In				12 v olt power from relay	12 volt power from relay. Relay must be controlled by +12V Relay Control signal, pin C1-29 above.
C1-62	Injector 2	Injector 2	A3	A3	В3	Saturated or peak and hold, 3A max continuous	Injector 2
C1-63	Injector 1	Injector 1	A1	A4	B11	Saturated or peak and hold, 3A max continuous	Injector 1
C1-64	+12V	+12V In				12 volt power from relay	12 v olt power from relay. Relay must be controlled by +12V Relay Control signal pin C1-29 abov e.
C1-65	+12V_SW	Ignition Switch	A25	A11	B1	10K pulldown	Full time battery power must be available at C1-10 before this input is triggered.
C1-66	Analog_In_Temp_1	Coolant Temp Sensor	D13	D2	C26	12 bit A/D, 2.49K pullup to 5V	See "Coolant Temperature" Setup Wizard for selection.
C1-67	Analog_In_Temp_2	Intake Air Temperature	D15	D8	C25	12 bit A/D, 2.49K pullup to 5V	See "Air Temperature" Setup Wizard for selection.
C1-68	Harness_Analog_In_Temp_3	Oil Temperature Sensor				12 bit A/D, 2.49K pullup to 5V	See 1D table OilTempCal table for calibration data and OilTemp [C] for channel data.
C1-69	Stepper_2A	Stepper 2A				Automotiv e, Programmable Stepper Driv er, up to 28V and ±1.4A	Be sure that each internal coil of the stepper motor is properly paired with the 1A/1B and 2A/2B ECU outputs. Supports Bi-Polar stepper motors only.
C1-70	Stepper_1A	Stepper 1A				Automotiv e, Programmable Stepper Driv er, up to 28V and ±1.4A	Be sure that each internal coil of the stepper motor is properly paired with the 1A/1B and 2A/2B ECU outputs. Supports Bi-Polar stepper motors only.

1	1

Infinity Pin	Hardware Reference	7100-XXXX-62 7101-XXXX-63 Function	Dest. Pin Honda OBD 1	Dest. Pin Honda OBD 2a	Dest. Pin Honda OBD 2b	Hardware Specification	Notes
C1-71	Stepper_2B	Stepper 2B				Automotiv e, Programmable Stepper Driv er, up to 28V and ±1.4A	Be sure that each internal coil of the stepper motor is properly paired with the 1A/1B and 2A/2B ECU outputs. Supports Bi-Polar stepper motors only.
C1-72	Stepper_1B	Stepper 1B				Automotiv e, Programmable Stepper Driv er, up to 28V and ±1.4A	Be sure that each internal coil of the stepper motor is properly paired with the 1A/1B and 2A/2B ECU outputs. Supports Bi-Polar stepper motors only.
C1-73	Power Ground	Ground				Power Ground	Connect directly to battery ground.
C2-1	DBW2 Motor +	DBW Motor Control Open				5.0A max Throttle Control Hbridge Driv e	+12V to open
C2-2	DBW2 Motor -	DBW Motor Control Close				5.0A max Throttle Control Hbridge Driv e	+12V to close
C2-3	Power Ground	Ground	B2	A22	B22	Power Ground	Connect directly to battery ground.
C2-4	Injector 7	Injector 7				Saturated or peak and hold, 3A max continuous	Injector 7
C2-5	Injector 8	Injector 8				Saturated or peak and hold, 3A max continuous	Injector 8
C2-6	Injector 9	Injector 9				Saturated or peak and hold, 3A max continuous	Injector 9
C2-7	Injector 10	Injector 10				Saturated or peak and hold, 3A max continuous	Injector 10
C2-8	Power Ground	Ground				Power Ground	Connect directly to battery ground.
C2-9	+12V	+12V In				12 v olt power from relay	12 volt power from relay. Relay must be controlled by +12V Relay Control signal, pin C1-29 abov e.
C2-10	Injector 11	Injector 11				Saturated or peak and hold, 3A max continuous	Not used
C2-11	Injector 12	Injector 12				Saturated or peak and hold, 3A max continuous	Not used

Infinity Pin	Hardware Reference	7100-XXXX-62 7101-XXXX-63 Function	Dest. Pin Honda OBD 1	Dest. Pin Honda OBD 2a	Dest. Pin Honda OBD 2b	Hardware Specification	Notes
C2-12	Analog_In_17	A/C Analog Request				12 bit A/D, 100K pullup to 5V	0–5V analog signal. Use +5V Out pins as power supply and Sensor Ground pins as the low reference. Do not connect signals referenced to +12V as this can permanently damage the ECU. See Setup Wizard Input Functions page for input selection. See AC_Request_In 1-axis table for activ ation logic.
C2-13	Analog_In_18	DBW_APP1 [%]				12 bit A/D, 100K pullup to 5V	0–5V analog signal. Use +5V Out pins as power supply and Sensor Ground pins as the low reference. Do not connect signals referenced to +12V as this can permanently damage the ECU.
C2-14	Analog_In_19	DBW_APP2 [%]				12 bit A/D, 100K pullup to 5V	0–5V analog signal. Use +5V Out pins as power supply and Sensor Ground pins as the low reference. Do not connect signals referenced to +12V as this can permanently damage the ECU.
C2-15	Analog_In_Temp_4	Charge Out Temperature				12 bit A/D, 2.49K pullup to 5V	See ChargeOutTemp [C] table for calibration data and ChargeOutTemp [C] for channel data.
C2-16	Analog_In_Temp_5	Airbox Temperature				12 bit A/D, 2.49K pullup to 5V	See AirboxTemp [C] table for calibration data and AirboxTemp [C] for channel data.
C2-17	Analog_In_Temp_6	Fuel Temperature				12 bit A/D, 2.49K pullup to 5V	See FuelTemp [C] table for calibration data and FuelTemp [C] for channel data.
C2-18	Analog_In_13	Oil Pressure				12 bit A/D, 100K pullup to 5V	0–5V analog signal. Use +5V Out pins as power supply and Sensor Ground pins as the low reference. Do not connect signals referenced to +12V as this can permanently damage the ECU. See Setup Wizard Oil Pressure page for setup options. See OilPressure [psig] for channel data.

1	2
	J

Infinity Pin	Hardware Reference	7100-XXXX-62 7101-XXXX-63 Function	Dest. Pin Honda OBD 1	Dest. Pin Honda OBD 2a	Dest. Pin Honda OBD 2b	Hardware Specification	Notes
C2-19	Analog_In_14	Traction Control Mode / Sensitivity				12 bit A/D, 100K pullup to 5V	0–5V analog signal. Use +5V Out pins as power supply and Sensor Ground pins as the low reference. Do not connect signals referenced to +12V as this can permanently damage the ECU. See the TC_SlipTrgtTrim [MPH] 1-axis table. A multi-position rotary switch such as AEM P/N 30- 2056 is recommended.
C2-20	Analog_In_15	Exhaust Back Pressure				12 bit A/D, 100K pullup to 5V	0–5V analog signal. Use +5V Out pins as power supply and Sensor Ground pins as the low reference. Do not connect signals referenced to +12V as this can permanently damage the ECU. See Setup Wizard Exhaust Pressure page for setup options. See EBPress [kPa] for channel data.
C2-21	Analog_In_16	DBW1_TPSB [%]				12 bit A/D, 100K pullup to 5V	0–5V analog signal. Use +5V Out pins as power supply and Sensor Ground pins as the low reference. Do not connect signals referenced to +12V as this can permanently damage the ECU.
C2-22	+5V_Out_2	+5V Out				Regulated, fused +5V supply for sensor power	Analog sensor power
C2-23	+5V_Out_2	+5V Out				Regulated, fused +5V supply for sensor power	Analog sensor power
C2-24	+5V_Out_2	+5V Out				Regulated, fused +5V supply for sensor power	Analog sensor power
C2-25	VR+_In_5	Driven Right Wheel Speed Sensor +				Differential Variable Reluctance Zero Cross Detection	See Driven Wheel Speed Calibration in the Setup Wizard Input Function Assignment page.
C2-26	VRIn_5	Driven Right Wheel Speed Sensor -					
C2-27	VRIn_4	Non Driven Right Wheel Speed Sensor -				Differential Variable Reluctance Zero Cross Detection	See Non Driven Wheel Speed Calibration in the Setup Wizard Input Function Assignment page.
C2-28	V R+_In_4	Non Driven Right Wheel Speed Sensor +					

Infinity Pin	Hardware Reference	7100-XXXX-62 7101-XXXX-63 Function	Dest. Pin Honda OBD 1	Dest. Pin Honda OBD 2a	Dest. Pin Honda OBD 2b	Hardware Specification	Notes
C2-29	LowsideSwitch_9	Tachometer			A19	Lowside switch, 4A max with internal flyback diode, 2.2K 12V pullup. Inductive load should NOT hav e full time power.	See Setup Wizard page Tacho for configuration options.
C2-30	AGND_2	Sensor Ground				Dedicated analog ground	Analog 0–5V sensor ground
C2-31	AGND_2	Sensor Ground				Dedicated analog ground	Analog 0–5V sensor ground
C2-32	AGND_2	Sensor Ground				Dedicated analog ground	Analog 0–5V sensor ground
C2-33	Analog_In_20	Spare Analog Input				12 bit A/D, 100K pullup to 5V	0–5V analog signal. Use +5V Out pins as power supply and Sensor Ground pins as the low reference. Do not connect signals referenced to +12V as this can permanently damage the ECU.
C2-34	Analog_In_21	3 Step Enable Switch				12 bit A/D, 100K pullup to 5V	0–5V analog signal. Use +5V Out pins as power supply and Sensor Ground pins as the low reference. Do not connect signals referenced to +12V as this can permanently damage the ECU. See 3StepSwitch 1- axis table for setup.
C2-35	Analog_In_22	USB Logging Activate				12 bit A/D, 100K pullup to 5V	0-5V analog signal. Use +5V Out pins as power supply and Sensor Ground pins as the low reference. Do not connect signals referenced to +12V as this can permanently damage the ECU. See USBLoggingRequestIn channel for input state. See Setup Wizard page USB Logging for configuration options.
C2-36	Analog_In_23	Charge Out Pressure				12 bit A/D, 100K pullup to 5V	0–5V analog signal. Use +5V Out pins as power supply and Sensor Ground pins as the low reference. Do not connect signals referenced to +12V as this can permanently damage the ECU. See ChargeOutPress [kPa] channel for input state. See Setup Wizard page Charge Out Pressure for calibration options.

-	

Infinity Pin	Hardware Reference	7100-XXXX-62 7101-XXXX-63 Function	Dest. Pin Honda OBD 1	Dest. Pin Honda OBD 2a	Dest. Pin Honda OBD 2b	Hardware Specification	Notes
C2-37	Digital_In_6	Spare Digital Input	В5	C5	A27	No pullup. Will work with TTL signals.	Input can be assigned to different pins. See Setup Wizard page Input Function Assignments for input mapping options.
C2-38	Digital_In_7	Clutch Switch				No pullup. Will work with TTL signals.	See ClutchSwitch 1-axis table for setup options. Input can be assigned to different pins. See Setup Wizard page Input Function Assignments for input mapping options.
C2-39	Power Ground	Ground				Power Ground	Connect directly to battery ground.
C2-40	Power Ground	Ground				Power Ground	Connect directly to battery ground.
C2-41	CanH_Bout	CANH				Dedicated High Speed CAN Transceiver	Not used
C2-42	CanL_Bout	CANL				Dedicated High Speed CAN Transceiver	Not used
C2-43	LowsideSwitch_8	Engine Protect Warning Out				Lowside switch, 4A max with internal flyback diode. Inductiv e load should NOT hav e full time power.	Activates if any of the following flags are true: OilPressProtectOut, LeanProtectOut, CoolantProtect. Output can be assigned to other functions. See Setup Wizard page LowSide Assignment Tables for additional options.
C2-44	LowsideSwitch_7	Spare GPO1				Lowside switch, 4A max with internal flyback diode. Inductive load should NOT have full time power.	See Spare GPO1 Basic Setup section of User GPIOs and PWM Setup Wizard page LowSide Assignment Tables for additional options.
C2-45	UEGO 2 VM	UEGO 2 VM					Virtual Ground signal. Connect to pin 5 of Bosch UEGO sensor.
C2-46	UEGO 2 UN	UEGO 2 UN				Bosch UEGO Controller	Nernst Voltage signal. Connect to pin 1 of Bosch UEGO sensor
C2-47	UEGO 2 IP	UEGO 2 IP					Pumping Current signal. Connect to pin 6 of Bosch UEGO sensor
C2-48	UEGO 2 IA	UEGO 2 IA					Trim Current signal. Connect to pin 2 of Bosch UEGO sensor
C2-49	UEGO 2 HEAT	UEGO 2 HEAT					Lowside switch for UEGO heater control. Connect to pin 4 of Bosch UEGO sensor. NOTE that pin 3 of the Sensor is heater (+) and must be power by a fused/ switched 12V supply.

© 2015 AEM Performance Electronics

Infinity Pin	Hardware Reference	7100-XXXX-62 7101-XXXX-63 Function	Dest. Pin Honda OBD 1	Dest. Pin Honda OBD 2a	Dest. Pin Honda OBD 2b	Hardware Specification	Notes
C2-50	+12V_R8C_CPU	Battery Perm Power				Dedicated power management CPU	Optional full time battery power. MUST be powered before the ignition switch input is triggered. (See C1- 65.)
C2-51	Coil 7	Coil 7				25 mA max source current	0–5V Falling edge fire. DO NOT connect directly to coil primary. Must use an ignitor OR CDI that accepts a FALLING edge fire signal.
C2-52	Coil 8	Coil 8				25 mA max source current	0–5V Falling edge fire. DO NOT connect directly to coil primary. Must use an ignitor OR CDI that accepts a FALLING edge fire signal.
C2-53	Coil 9	Coil 9				25 mA max source current	0–5V Falling edge fire. DO NOT connect directly to coil primary. Must use an ignitor OR CDI that accepts a FALLING edge fire signal.
C2-54	Coil 10	Coil 10				25 mA max source current	0–5V Falling edge fire. DO NOT connect directly to coil primary. Must use an ignitor OR CDI that accepts a FALLING edge fire signal.
C2-55	HighsideSwitch_2	Fuel Pump				Multi-f unction pin depending on hardware configuration	+12V High Side Drive. Will prime for 2 seconds at key on and activate if RPM > 0.
C2-56	Not used	Not used				Not used	Not used

\* D16Y7 Intake air control valves not supported.

\*\* An 80,000–100,000 ohm resistor is required to be wired inline for proper speedometer function.

#### Honda Pin Numbering



## Infinity Pin Numbering



AEM Infinity Connectors Viewed from Wire Side

### **12 MONTH LIMITED WARRANTY**

Advanced Engine Management Inc. warrants to the consumer that all AEM High Performance products will be free from defects in material and workmanship for a period of twelve (12) months from date of the original purchase. Products that fail within this 12-month warranty period will be repaired or replaced at AEM's option, when determined by AEM that the product failed due to defects in material or workmanship. This warranty is limited to the repair or replacement of the AEM part. In no event shall this warranty exceed the original purchase price of the AEM part nor shall AEM be responsible for special, incidental or consequential damages or cost incurred due to the failure of this product. Warranty claims to AEM must be transportation prepaid and accompanied with dated proof of purchase. This warranty applies only to the original purchaser of product and is non-transferable. All implied warranties shall be limited in duration to the said 12-month warranty period. Improper use or installation, accident, abuse, unauthorized repairs or alterations voids this warranty. AEM disclaims any liability for consequential damages due to breach of any written or implied warranty on all products manufactured by AEM. Warranty returns will only be accepted by AEM when accompanied by a valid Return Merchandise Authorization (RMA) number. Product must be received by AEM within 30 days of the date the RMA is issued.

Please note that before AEM can issue an RMA for any electronic product, it is first necessary for the installer or end user to contact the EMS tech line at 1-800-423-0046 to discuss the problem. Most issues can be resolved over the phone. Under no circumstances should a system be returned or a RMA requested before the above process transpires.

AEM will not be responsible for electronic products that are installed incorrectly, installed in a non-approved application, misused, or tampered with.

Any AEM electronics product can be returned for repair if it is out of the warranty period. There is a minimum charge of \$50.00 for inspection and diagnosis of AEM electronic parts. Parts used in the repair of AEM electronic components will be extra. AEM will provide an estimate of repairs and receive written or electronic authorization before repairs are made to the product.