



36-3826 Rev. A
TA2 FORD ENGINE HARNESS
COMPONENT DIAGRAM

All connectors viewed
from REAR unless
otherwise noted

TABLE OF ACRONYMS	
FP	Fuel Pressure
IAT	Intake Air Temp
EOT	Engine Oil Temp
GBT	Gear Box Temp
UEGO	Oxygen Sensor
CLT	Coolant
MAP	Manifold Pressure
EPM	Engine Position Module
TPS	Throttle Position Sensor
INJ	Injector
GND	Ground