# Instruction Manual



AEMnet Adapter Harness Installation for Series 2 EMS 30-6030, 30-6050, 30-6051, 30-6052, 30-6053, 30-6060, 30-6310, 30-6311, 30-6320 P/N 30-3430, 30-3431, 30-3432, & 30-3435



## STOP!

# THIS PRODUCT HAS LEGAL RESTRICTIONS. READ THIS BEFORE INSTALLING/USING!

WARNING! THIS IS A RACE ONLY PRODUCT MANUFACTURED AND SOLD FOR INSTALLATION ON VEHICLES DESIGNED TO BE USED SOLELY FOR COMPETITION PURPOSES. ONCE THIS PART IS INSTALLED, THE VEHICLE MAY NEVER BE USED, OR REGISTERED OR LICENSED FOR USE, ON A PUBLIC ROAD OR HIGHWAY. IF YOU INSTALL THIS PART ON YOUR VEHICLE AND USE THE VEHICLE ON A PUBLIC ROAD OR HIGHWAY, YOU WILL VIOLATE THE CLEAN AIR ACT AND MAY BE SUBJECT TO PERSONAL CIVIL OR CRIMINAL LIABILITY, INCLUDING FINES OF UP TO \$4,819 PER DAY.

IT IS THE RESPONSIBILITY OF THE INSTALLER AND/OR USER OF THIS PRODUCT TO ENSURE THAT IT IS USED IN COMPLIANCE WITH ALL APPLICABLE LAWS AND REGULATIONS. IF THIS PRODUCT WAS PURCHASED IN ERROR, DO NOT INSTALL AND/OR USE IT. THE PURCHASER MUST ARRANGE TO RETURN THE PRODUCT FOR A FULL REFUND.

THIS POLICY ONLY APPLIES TO INSTALLERS AND/OR USERS WHO ARE LOCATED IN THE UNITED STATES; HOWEVER CUSTOMERS WHO RESIDE IN OTHER COUNTRIES SHOULD ACT IN ACCORDANCE WITH THEIR LOCAL LAWS AND REGULATIONS.

#### **WARNING!**

Improper installation and/or adjustment of this product can result in major engine/vehicle damage. For technical assistance visit our dealer locator to find a professional installer/tuner near you.

Note: AEM holds no responsibility for any engine damage or personal injury that results from the misuse of this product, including but not limited to injury or death.

#### **AEM Performance Electronics**

2205 W 126<sup>th</sup> Street Unit A, Hawthorne, CA 90250 Phone: (310) 484-2322 Fax: (310) 484-0152 <a href="http://www.aemelectronics.com/">http://www.aemelectronics.com/</a> Instruction Part Number: 10-3430 Rev 1 © 2011 AEM Performance Electronics, Inc.

#### **AEMnet**

AEMnet is an open architecture software and hardware interface based on the CAN 2.0 specification, which provides the ability for multiple AEMnet enabled devices to easily communicate with each other through a single cable. The hardware connection is made through a Deutsch 4P DTM connector. Devices connected to the AEMnet transmit data through this one connection. Once the AEMnet adapter is installed, the Series 2 EMS will be able to send and receive data on the AEMnet. Instructions for configuring the Series 2 EMS to output data are included in this manual. Instructions on configuring the Series 2 EMS to receive data from other AEMnet enabled products are contained in the individual product manuals. Upon completion of these instructions, the Series 2 EMS will be configured to output data to an AQ1 Data Logger or other data receiving device.

#### The following AEM products are currently AEMnet enabled:

Series 2 Engine Management System

EMS-4 Universal Standalone Engine Management System

4-Channel Wideband UEGO Controller

AQ-1 Data Logger

Dyno Shaft On-Vehicle Dynamometer

#### **AEMnet CONNECTORS**

The AEMnet has four wires, two are for communication (white pin 1 and green pin 2) and two are for powering (red pin 3 and black pin 4) certain AEMnet devices. Only the two communication wires (white pin 1 and green pin 2) are needed for the Series 2 EMS to send/receive data as the EMS is not powered by AEMnet. The red and black wires will need to be connected when using the Series 2 EMS with devices that are powered by AEMnet such as the Dyno-Shaft (see individual instructions for details). The AEMnet connectors are shown below in figure 1. See table 1 for the AEMnet connection pinout.

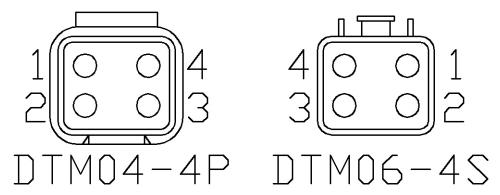


Figure 1: AEMnet connectors, wire entry view

AEMnet	Connector	Series 2 EMS Connector
Pin 1	White	CAN1H
Pin 2	Green	CAN1L
Pin 3	Red	AEMnet Power (switched 12 volts)
Pin 4	Black	AEMnet Ground

Table 1: AEMnet connector pinout

### REMOVE EXISTING WIRES FROM ECU PLUG(S)

1. Locate a small screwdriver (a precision 1.5mm wide flathead screwdriver is recommended) and carefully pry white plastic retainer using both slots in the retainer so it disengages vertically about 1mm as shown in figures 2 and 3:

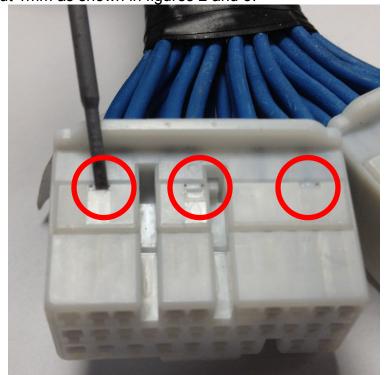


Figure 2: Pry in these areas

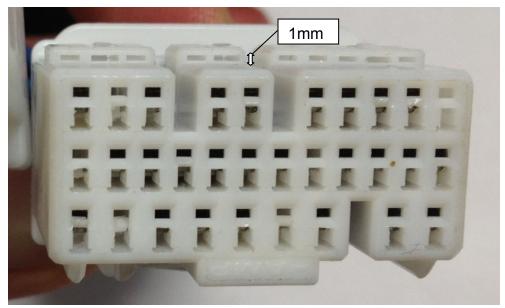


Figure 3: Lock that has to move up

2. Next remove the pin from the plastic connector by lightly prying on the plastic tabs that secure the pin in the plastic connector while gently pulling on the wire at the same time as shown in figures 4 and 5.

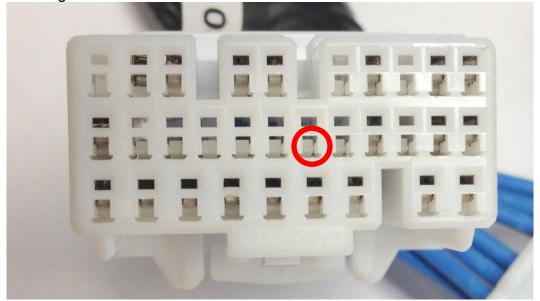


Figure 4: Pry this tab up with the screwdriver or paper clip to release pin

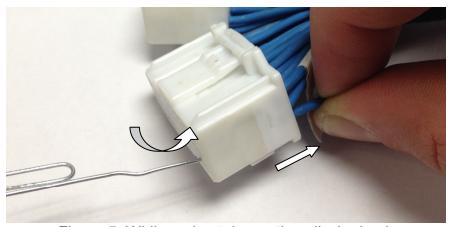


Figure 5: While prying tab, gently pull wire back

3. If the screwdriver does not fit in the area of the plug, a ground paper clip can be used to release the tabs of the plug as shown in figure 6.



Figure 6: Grind a paper clip like this

#### **INSTALL AEMnet ADAPTER HARNESS**

Connector A

4. Table 2 below lists the corresponding CAN1L and CAN1H pin locations for each Series 2 EMS.

		CAN1L (Green wire)	CAN1H (White wire)
EMS	Adapter p/n	LOCATION	LOCATION
30-6030	30-3430	C22	C21
30-6050	30-3432	D14	D10
30-6051	30-3432	D14	D10
30-6052	30-3432	D14	D10
30-6053	30-3432	D14	D10
30-6060	30-3432	C28	C29
30-6310	30-3431	77	87
30-6311	30-3431	57/77	67/87
30-6320	30-3435	33	13

Table 2: CAN1L and CAN1H pin locations

Figures 7, 8, 9, and 10 below show the connectors for each Series 2 EMS.

Connector B

A1	A2	4	.3	A4		F	A5	A6	i A	۹7		Α	.8	A9	A10	A11	B1	B2	]	ВЗ	В4	B5		В6	В7	В8	C1	C2	С3	C4		C5	C6	C7		C8	C9	C10	D	1	F	D2	D3	D4		D5
A1:	2 A13	3 A	14	A15	A1	6	417	A18	ВА	19	A20	A2	21	122	A23	A24	B9	B10	B11	B12	B13	B1-	4 B1	5 B16	B17	B18	C1	C12	C13	C14	C15	C16	C17	C18	C19	C20	C21	C22	D	6 [	07	D8	D9	D10	D11	D12
		A	25	A26	A2	7		A28	ВА	29	A30	A3	31		A32		B19	B20		B2	1 B22	2	B2	3 B24	B25			C23	C24	C25		C26	C27	C28		C29	C30	C31	D.	3 D	14	D15		D16		

Figure 7: Wire-side view of pinout for 6030

A1	A2	АЗ	A4		A5	A6	A7		100	A8	A9	A10	A11	B1	B2	1	В3	B4	B5		B6	B7	B8	C1	C2	C3	C4		C5	C6	C7	C8	C9	C10	D1		D2	2 D	3 [	D4	D5
A12	A13	A14	4 A15	A16	A17	A18	A1	9 A2	20 A	A21	A22	A23	A24	B9	B10	B11	B12	B13	B14	B15	B16	B17	B18	C11	C12	C13	C14	C15	C16	C17	C18 C19	C20	C2	C22	D6	D7	D8	3 D:	9 0	010 D11	D12
		A25	5 A26	A27		A28	A2	9 A:	30 A	<b>431</b>		A32		B19	B20		B21	B22		B23	B24	B25			C23	C24	C25		C26	C27	C28	C29	C30	C31	D13	D14	D1	5	С	016	

Connector A Connector B Connector C Connector D

Connector C

Connector D

Figure 8: Wire-side view of pinout for 6050, 6051, 6052, 6053, and 6060 EMS

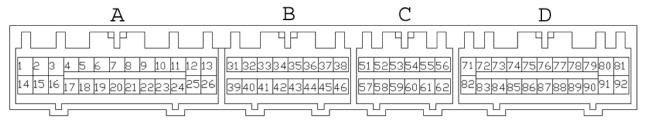


Figure 9: Wire-side view of pinout for 6310 and 6311 EMS

1	2	1	3	4	1	Γ					5	6	ò		7	8	41	42	4	3 4	4						45	46	47	71	72	2	73	74					]	75	76	77
9	10	11	1 12	13	14	11	5 1	16	17	18	19	92	02	21	22	23	48	49	50	5	1 5	2	53	54	55	56	57	58	59	78	79	80	81	82	83	84	85	86	87	88	89	90
24	25		26	27	28	32	9		30	31	32	23	3		34	35	60	61		6	26	3	64		65	66		67	68	91	92	93	3	94	95		96	97	98	3	99	100

Figure 10: Wire-side view of Pinout for 6320 EMS

5. To install the harness into the ECU plug, align the CANL and CANH pins into the receptacle of the plug and push in until it clicks as shown in figure 11:

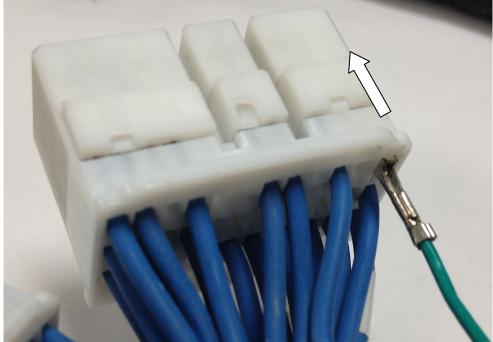


Figure 11: Pushing pin into ECU plug

6. Push the pin lock back into place until it is flush with the ECU plug as shown in figure 12:

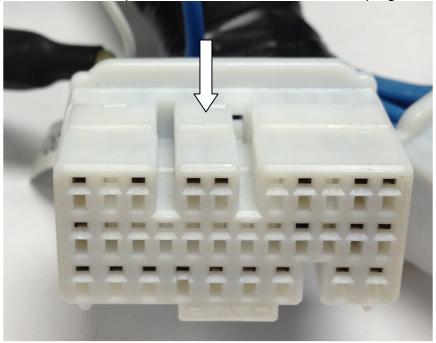


Figure 12: Ensure pin lock is relocked

#### **CONFIGURING THE SERIES 2 EMS**

The AEMnet data stream is compatible with version AEM25 01v23 firmware and later. To activate the AEMnet data stream, open AEMTuner and go to Wizards > Setup Wizard and select the AEMnet Data Stream. See figure 13 below.

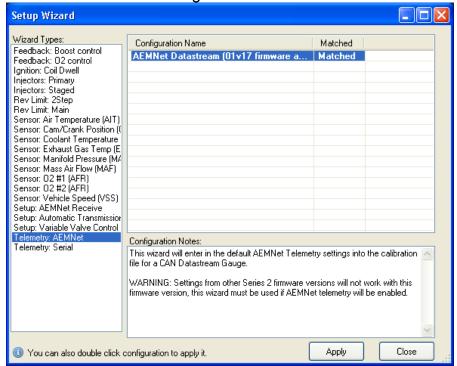


Figure 13: Selecting the AEMnet Datastream

With the AEMnet enabled, the Series 2 EMS broadcasts information as shown below in figure 14

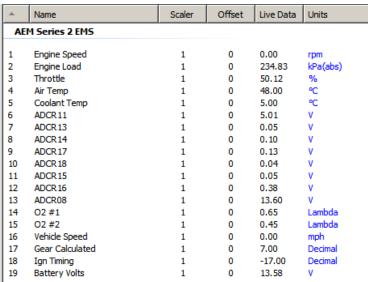


Figure 14: AEMnet Data

#### WARRANTY

#### 12 MONTH LIMITED WARRANTY

Advanced Engine Management Inc. warrants to the consumer that all AEM High Performance products will be free from defects in material and workmanship for a period of twelve (12) months from date of the original purchase. Products that fail within this 12-month warranty period will be repaired or replaced at AEM's option, when determined by AEM that the product failed due to defects in material or workmanship. This warranty is limited to the repair or replacement of the AEM part. In no event shall this warranty exceed the original purchase price of the AEM part nor shall AEM be responsible for special, incidental or consequential damages or cost incurred due to the failure of this product. Warranty claims to AEM must be transportation prepaid and accompanied with dated proof of purchase. This warranty applies only to the original purchaser of product and is non-transferable. All implied warranties shall be limited in duration to the said 12 month warranty period. Improper use or installation, accident, abuse, unauthorized repairs or alterations voids this warranty. AEM disclaims any liability for consequential damages due to breach of any written or implied warranty on all products manufactured by AEM. Warranty returns will only be accepted by AEM when accompanied by a valid Return Goods Authorization (RGA) number. Product must be received by AEM within 30 days of the date the RGA is issued.

Please note that before AEM can issue an RGA for any product, it is first necessary for the installer or end user to contact the AEM Performance Electronics tech line at 1-800-423-0046 to discuss the problem. Most issues can be resolved over the phone. Under no circumstances should a system be returned or a RGA requested before the above process transpires.

Need additional help? Contact the AEM Performance Electronics tech department at 1-800-423-0046 or tech@aempower.com, or visit the AEM Performance Electronics forum at http://forum.aempower.com/forum/